

Sony MVC-CD300/CD400/CD500

RECOMMENDED CAMERA SETTINGS ONESHOT360™

Attach the OneShot360 unit, using the adapter provided with your system.
Power the camera on. **Turn the Mode Dial to A.**

- **ZOOM:** Use the Zoom on to exactly fill the digital camera LCD viewer screen with the circular image. If you zoom in too much, you will lose part of the field of view. If you zoom in too little, you will not get maximum resolution. Note also that the OneShot image may not be exactly centered in the LCD screen – this is normal.
- **FLASH:** Disable the flash by pressing the UP arrow on the control button until you see the “flash off” icon on the LCD.
- **Aperture:** Make sure your Sony MVC CD300, CD400 or CD500 is in Aperture Priority Mode by turning the Mode Dial to A. Adjust the jog dial until you see an f-stop setting of **7.1**. Press the jog dial to lock this value.
- **Focus:** Focus your OneShot image pressing the focus button until you see the icon for manual focus (pointing finger). Adjust the jog dial until the desired distance is shown on the LCD screen. We recommend a setting of **1 meter**. Press the jog dial to lock this value.
- **Image Size:** Press the Image Size button (same as Delete Image Button) found below the LCD screen. Set the Image Size as follows:

CD300: 2048 X 1536

CD400: 2272 X 1704

CD500: 2592 X 1944

Press the MENU button and use arrow buttons to set:

- **White Balance:** (WB) Auto is usually fine for most shots.
- **ISO Setting:** RemoteReality recommends ISO sensitivity 100 for all shots.
- **Picture Quality:** Set the Picture Quality to FINE.
- **Sharpness:** Set the image sharpness value to NORMAL.
- **Saturation:** Set the image saturation value to NORMAL.
- **Contrast:** Set the image contrast value to NORMAL.
- **Self-Timer:** Select the self-timer by pressing the bottom arrow on the control button. Press the bottom arrow again to shut the timer off.