



Minolta Dimage 7

Recommended Camera OneShot360™ settings

After Attaching the OneShot360 unit, and powering the camera on in A mode (Aperture Priority):

- **Aperture Priority Mode:** You can get to the A mode setting by turning the function dial to PASM. While pressing in the function button rotate the control dial until you see A in the data panel.
- **Zoom:** Use the zooming ring to fill the digital camera LCD viewer screen with the circular image at approximately a 35mm focal length. If you zoom in too much, you will lose part of the field of view. If you zoom in too little, you will not get maximum resolution. Also at the 35mm zoom setting you will not get vignetting from the adapters. Note: The OneShot image may not be exactly centered in the LCD screen – this is normal.
- **Flash:** Make sure the flash is disabled by depressing the pop-up flash.
- **Focus:** To focus your OneShot image with the Minolta Dimage 7 camera, press the AF/MF Focus-mode button until MF appears in the monitor. Then rotate the focusing ring until the infinity symbol appears.
- **Aperture:** Adjust the Control Dial to set aperture to an f-stop of 8.0.

***Note: Make sure you are using a tripod when shooting with a slow shutter speed.**

On the Function Dial:

- **Mode: White Balance:** (WB) choose Auto by holding in the function button and turning the control dial.
- **Mode: Image Quality:** (QUAL) choose the fine setting by holding in the function button and turning the control dial.
- **Mode: Image Size:** (SIZE) choose the 2560x1920 setting by holding in the function button and turning the control dial.
- **Mode: Self Timer:** (DRIVE) choose the self-timer setting by holding in the function button and turning the control dial.
- **Mode: ISO Sensitivity:** (ISO) chooses an ISO setting of 100 by holding in the function button and turning the control dial.