

Nikon CoolPix 5700

RECOMMENDED CAMERA SETTINGS ONESHOT360™

Attach the OneShot360 unit, and powering the camera on:

- **Zoom:** Use the Zoom to exactly fill the digital camera LCD viewer screen with the circular image. Use the Zoom button on the back of the camera. If you zoom in too much, you will lose part of the field of view. If you zoom in too little, you will not get maximum resolution. Note also that the donut image may not be exactly centered in the LCD screen – this is normal.
- **Flash:** Make sure the flash is disabled by pressing the flash/ISO button (lightning bolt symbol) to the left of the LCD screen on the side of the camera. Press button until you see the “flash off” icon on the LCD.
- **ISO setting:** RemoteReality recommends using an ISO sensitivity of 100. Rotating the command dial while pressing the ISO button sets sensitivity.
- **Self-timer:** Press the MF button located on the left side of the camera until the timer-mode icon appears in the LCD screen.
- **Focus:** Press and hold the MF button on the left side of the camera. Turn the Command dial while holding the MF button until the MF slide bar on the LCD screen indicates infinity. NOTE: If you zoom the lens after focusing, you will have to reset the focus.
- **Aperture*:** Set the aperture to f7.3. Press the FUNC button on the top of the camera while turning the Command Dial until the “A” appears in the LCD screen. Continue turning the Command Dial left/right to adjust to an f-stop of 7.3.

***NOTE: You can use shutter priority mode, as long as you use a shutter speed that would give you the desired f# of 7.3. Also, make sure you are using a tripod when shooting with a slow shutter speed.**

Press the MENU button and use arrow buttons to:

- **White Balance:** The camera’s default setting of *Auto* is usually fine for most shots.
- **Image Quality and Size:** Use the SIZE button on the left side of the camera to set the camera to Fine.